

manuale d'installazione ed uso • installation and use manual • installations- und bedienungsanleitung  
manuel d'installation et d'utilisation • manual de instalación y uso

# SENTINEL DUAL

SDH 1000-1500-2200-3000  
SDH 2200-3000 ER



---

## INTRODUCTION

Congratulations on purchasing a **UPS Sentinel Dual** product and welcome to **Riello UPS**! To use the support service offered by **Riello UPS**, visit the site **[www.riello-ups.com](http://www.riello-ups.com)**

Our Company is a specialist in the design, development and manufacturing of uninterruptible power supplies (UPS).

The UPS described in this manual is a high quality product which has been carefully designed and built in order to guarantee the highest levels of performance.

This device can be installed by anyone on the condition that they have **READ THIS INSTALLTION AND USER MANUAL CAREFULLY.**

**The UPS and the Battery Box generate DANGEROUS internal electrical voltages. All maintenance operations must be carried out by suitably qualified operators.**

This manual contains detailed instructions for using and installing the UPS and any additional Battery boxes.

**For information on how to use and maximise the performance of your device, please retain the CD containing this manual and read it carefully before operating the equipment.**

---

## ENVIRONMENTAL PROTECTION

In the development of its products, the company devotes abundant resources to analysing the environmental aspects. All our products pursue the objectives defined in the environmental management system developed by the company in compliance with applicable standards.

No hazardous materials such as CFCs, HCFCs or asbestos are used in this product.

When evaluating packaging, the choice of material has been made favouring recyclable materials.

For correct disposal, please separate and identify the type of material of which the packaging is made according to the table below. Dispose of all material in compliance with applicable standards in the country in which the product is used.

<b><i>DESCRIPTION</i></b>	<b><i>MATERIAL</i></b>
Box	Cardboard
Packaging corner	Stratocell
Protective bag	Polythene
Accessories bag	Polythene

---

## DISPOSING OF THE PRODUCT

The UPS and the Battery Box contain electronic PCBs and batteries which are considered TOXIC and HAZARDOUS waste. When the product reaches the end of its operating life, dispose of it in accordance with applicable local legislation. Disposing of the product correctly contributes to respecting the environment and personal health.

© The reproduction of any part of this manual, in whole or in part, is forbidden without the prior consent of the manufacturer. In order to make improvements, the manufacturer reserves the right to modify the product described at any moment and without notice.

---

# CONTENTS


<b><i>PRESENTATION</i></b>	<b><i>5</i></b>
<b><i>UPS VIEWS</i></b>	<b><i>6</i></b>
<b><i>FRONT VIEW</i></b>	<b><i>6</i></b>
<b><i>REAR VIEW</i></b>	<b><i>7</i></b>
<b><i>DISPLAY PANEL VIEW</i></b>	<b><i>8</i></b>
<b><i>BATTERY BOX (ACCESSORY NOT SUPPLIED WITH THE UPS)</i></b>	<b><i>9</i></b>
<b><i>REAR VIEW</i></b>	<b><i>9</i></b>
<b><i>INSTALLATION</i></b>	<b><i>10</i></b>
<b><i>INITIAL CONTENT CHECK</i></b>	<b><i>10</i></b>
<b><i>INSTALLATION ENVIRONMENT</i></b>	<b><i>11</i></b>
<b><i>BATTERY BOX INSTALLATION</i></b>	<b><i>11</i></b>
<b><i>SETTING THE NOMINAL BATTERY CAPACITY</i></b>	<b><i>11</i></b>
<b><i>TOWER VERSION</i></b>	<b><i>12</i></b>
<b><i>TOWER VERSION WITH BATTERY BOX</i></b>	<b><i>13</i></b>
<b><i>RACK VERSION</i></b>	<b><i>14</i></b>
<b><i>USE</i></b>	<b><i>15</i></b>
<b><i>CONNECTIONS AND SWITCHING ON FOR THE FIRST TIME</i></b>	<b><i>15</i></b>
<b><i>SWITCHING ON FROM THE MAINS</i></b>	<b><i>15</i></b>
<b><i>SWITCHING ON FROM THE BATTERY</i></b>	<b><i>15</i></b>
<b><i>SWITCHING OFF THE UPS</i></b>	<b><i>15</i></b>
<b><i>DISPLAY PANEL MESSAGES</i></b>	<b><i>16</i></b>
<b><i>UPS STATUS MESSAGES</i></b>	<b><i>16</i></b>
<b><i>MEASUREMENT DISPLAY AREA</i></b>	<b><i>17</i></b>
<b><i>CONFIGURING THE OPERATING MODE</i></b>	<b><i>18</i></b>
<b><i>POSSIBLE SETTINGS</i></b>	<b><i>18</i></b>
<b><i>ADDITIONAL FUNCTIONS</i></b>	<b><i>18</i></b>
<b><i>SOFTWARE</i></b>	<b><i>20</i></b>
<b><i>MONITORING AND CONTROL SOFTWARE</i></b>	<b><i>20</i></b>
<b><i>CONFIGURATION SOFTWARE</i></b>	<b><i>20</i></b>
<b><i>UPS CONFIGURATION</i></b>	<b><i>21</i></b>
<b><i>COMMUNICATION PORTS</i></b>	<b><i>23</i></b>
<b><i>RS232 CONNECTOR</i></b>	<b><i>23</i></b>

<i>COMMUNICATION SLOT</i>	<b>23</b>
<i>BATTERY PACK REPLACEMENT</i>	<b>24</b>
<b><i>TROUBLESHOOTING</i></b>	<b><i>26</i></b>
<i>ALARM CODES</i>	<b>28</b>
<i>FAULT</i>	<b>28</b>
<i>LOCK</i>	<b>29</b>
<b><i>TECHNICAL DATA</i></b>	<b><i>30</i></b>

## PRESENTATION


**SENTINEL DUAL** uses ON-LINE double conversion technology, resulting in the highest levels of reliability and maximum protection for critical loads such as servers, IT applications and Voice/Data.

This family was designed with versatility in mind, allowing for installation in both tower and rack positions. The following shows how the product can be installed in the two different positions:

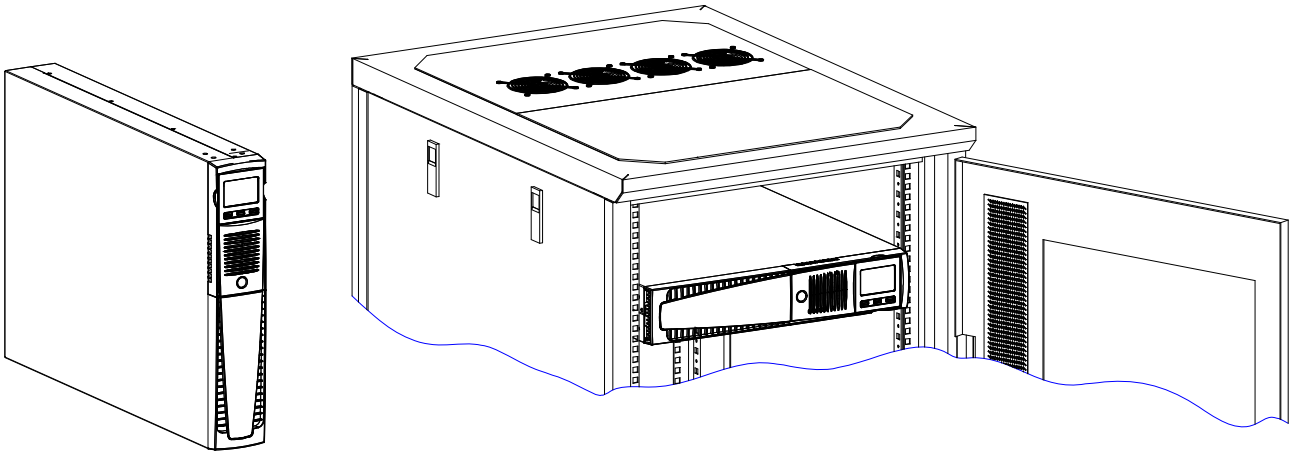

The UPS is also equipped with a dedicated battery pack that allows for easy battery replacement (hot swap) in complete safety thanks to the protected connection system.


It is possible to use one or more autonomy expansion units known as **BATTERY BOXES** (optional accessories) with the same dimensions and aesthetic appearance as the UPS.

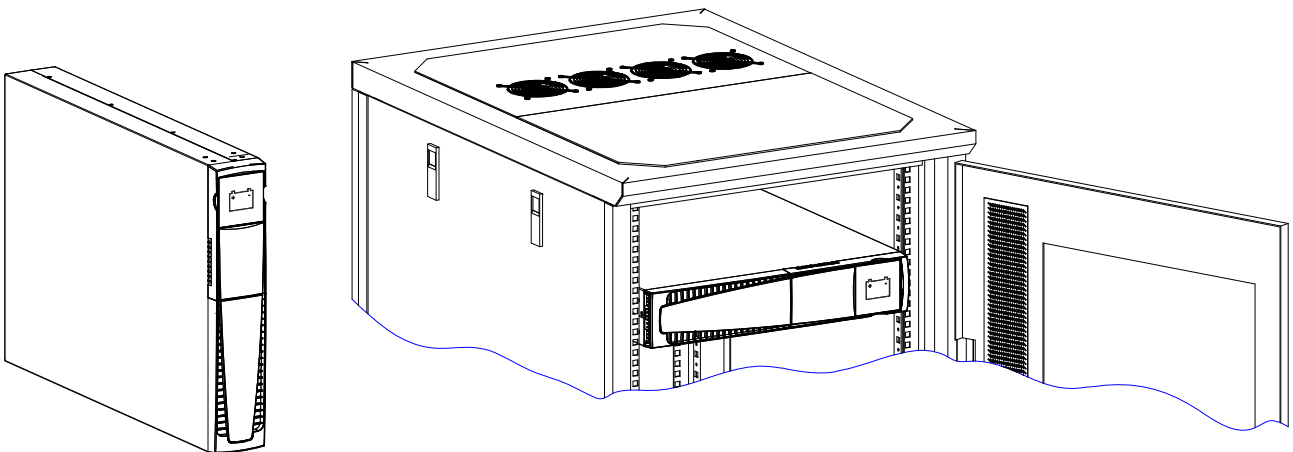

**ER series** models are fitted with upgraded battery charges for long runtime and business continuity applications. For these versions, the batteries are housed in separate cabinets.

# UPS VIEWS


## FRONT VIEW

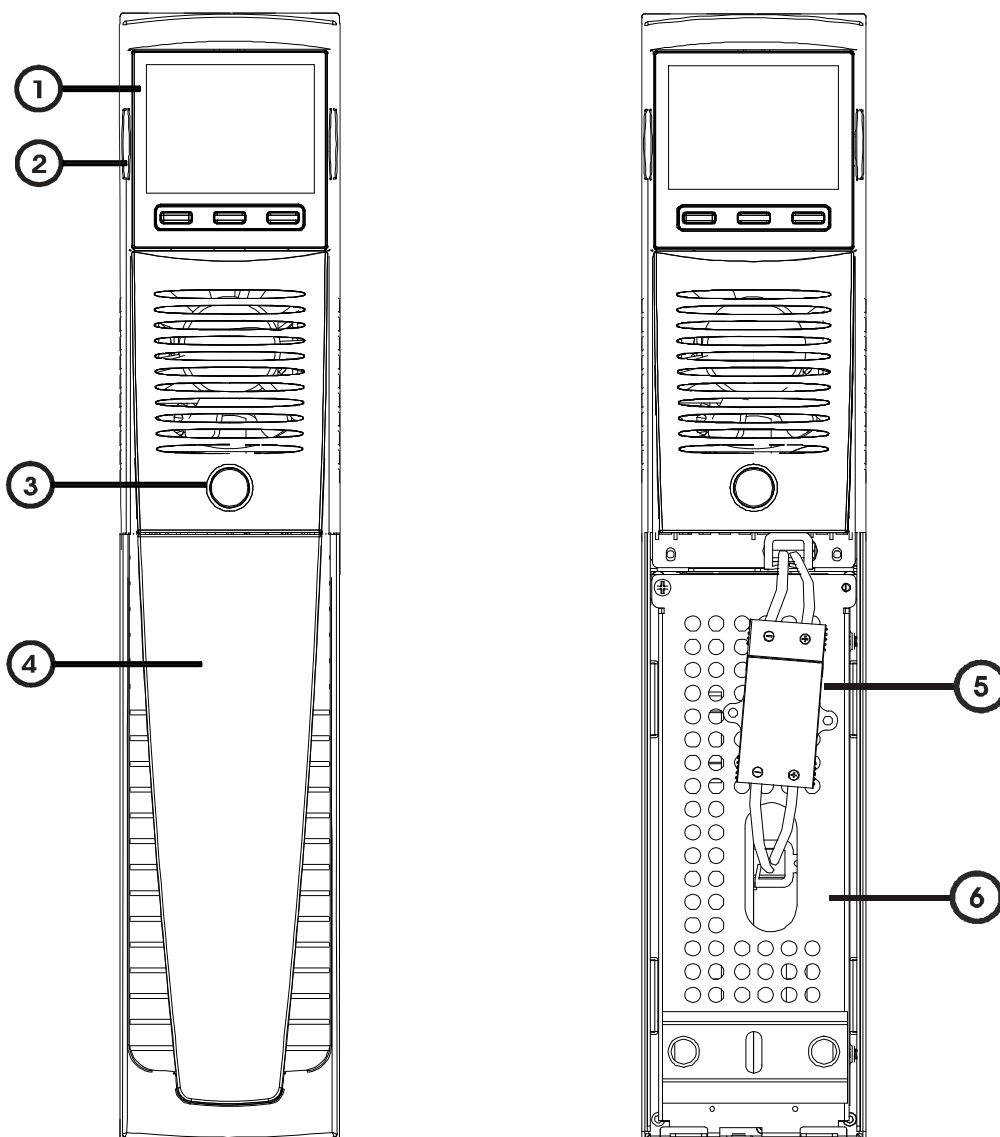


- ① Extractable/rotatable display plate
- ② Release slits
- ③ ON/OFF Switch

- ④ Removable front panel
- ⑤ Battery pack connector
- ⑥ Battery pack retention panel

## REAR VIEW

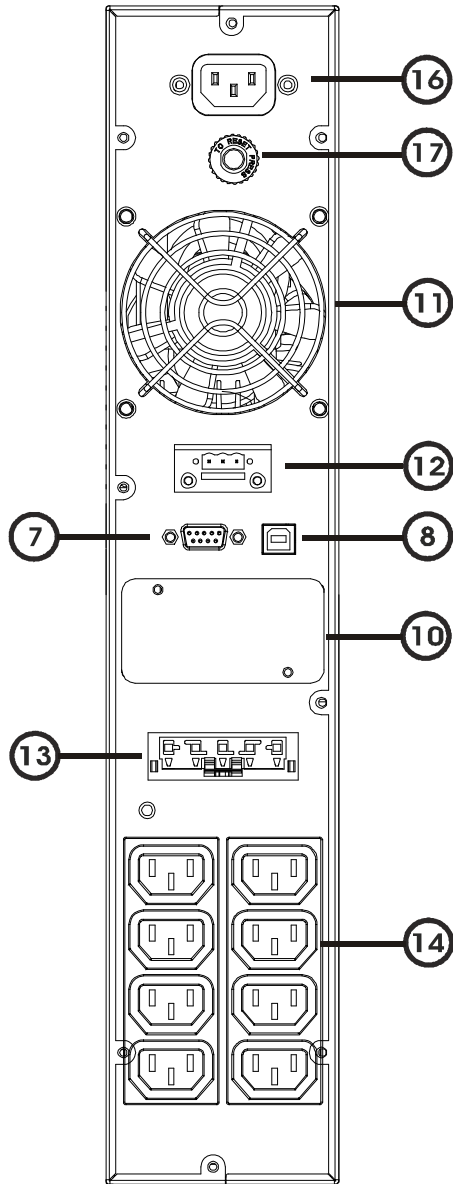

**Model 1000VA / 1500VA**

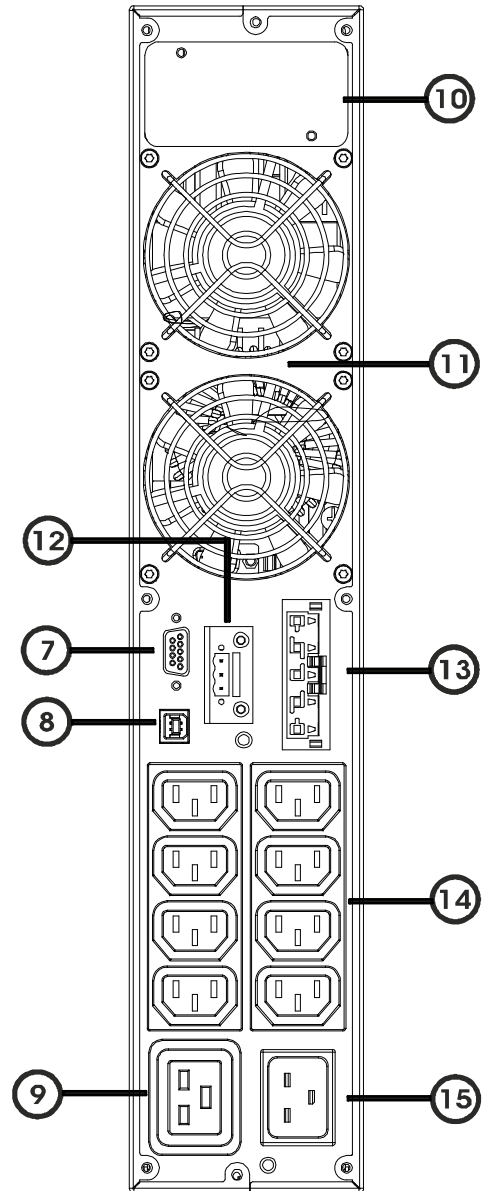


**Model 2200VA / 3000VA**

- ⑦ Communication port RS232
- ⑧ USB communication port
- ⑨ IEC 16A output socket
- ⑩ Communication Card Slots
- ⑪ Cooling fans
- ⑫ Remote control terminal board

- ⑬ Battery expansion connector (optional)
- ⑭ IEC 10A output socket
- ⑮ IEC 16A input plug
- ⑯ IEC 10A input plug
- ⑰ Circuit breaker

## DISPLAY PANEL VIEW

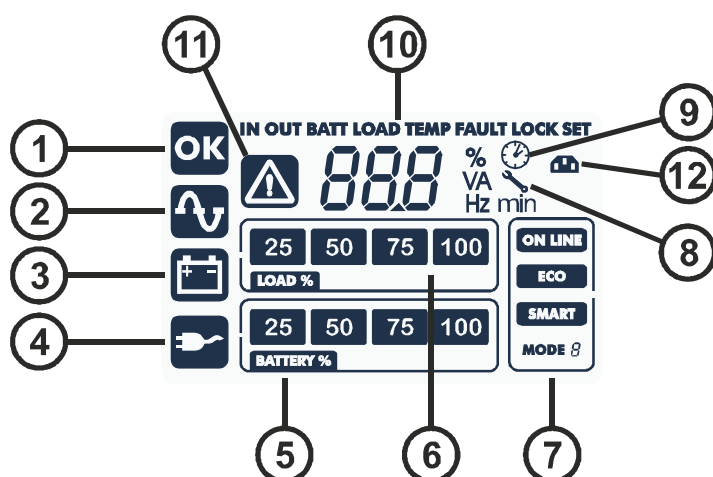

- |                            |                            |
|----------------------------|----------------------------|
| Ⓐ "SEL" button (Select)    | ⑥ Load level indicator     |
| Ⓑ "ON" button              | ⑦ Configuration area       |
| Ⓒ "STAND-BY" button        | ⑧ Maintenance request      |
| ① Regular operation        | ⑨ Timer                    |
| ② Mains operation          | ⑩ Measurement display area |
| ③ Battery operation        | ⑪ Stand-by / alarm         |
| ④ Load powered by bypass   | ⑫ EnergyShare              |
| ⑤ Battery charge indicator |                            |




## BATTERY BOX (ACCESSORY NOT SUPPLIED WITH THE UPS)

The BATTERY BOX is an optional accessory for this range of UPS (same dimensions and aesthetic appearance). The BATTERY BOX contains batteries which allow the operating time of the uninterruptible power supplies to be increased during extended blackouts. The number of batteries contained can vary according to the type of UPS for which the BATTERY BOX is intended. It is therefore necessary to take great care to ensure that the battery voltage of the BATTERY BOX is the same as the voltage permitted by the UPS.

Several battery boxes can be connected in series to achieve a longer extended runtime.

If the UPS is connected to a battery box, the maximum active power is derated from PF 0.9 to PF 0.8.

### REAR VIEW

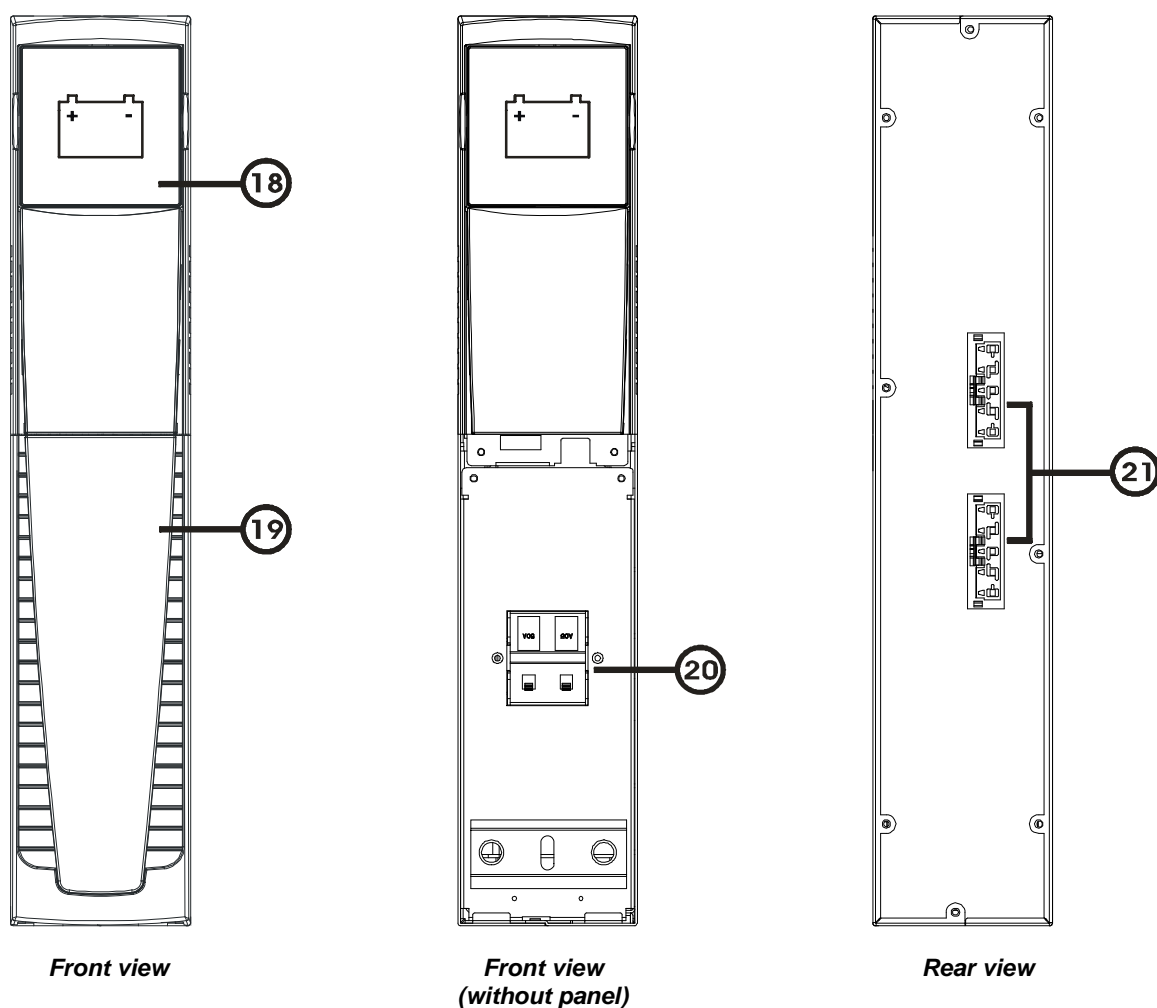

⑱ Extractable/ rotatable battery box plate

⑲ Removable front panel

⑳ Battery isolator


㉑ Battery expansion connector

# INSTALLATION


## INITIAL CONTENT CHECK

After opening the packaging, it is first necessary to check the contents.  
The package must contain:


UPS

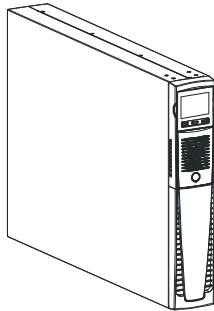


Support feet

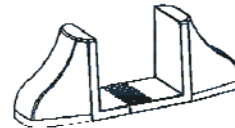


(UK plug?) Schuko power cable - IEC 10A  
(IEC 16A only for models 2200/3000VA)

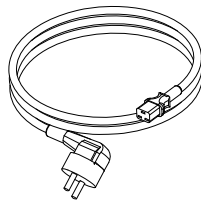


2 IEC 10A connection cables

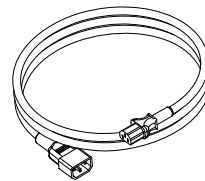


USB cable

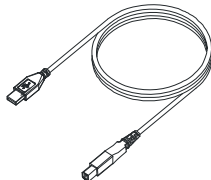


RS232 cable

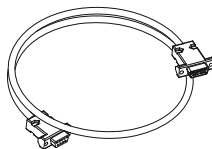


User manual CD + Safety manual

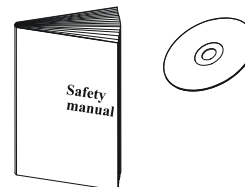


Handles for rack installation

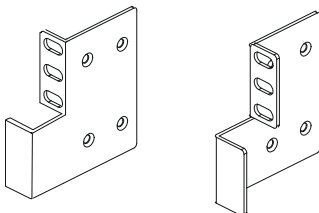


Handle screws



Battery expansion plug  
(ER version only)

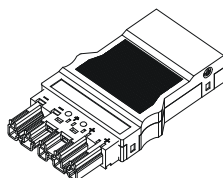

IEC 16A male plug  
(For 2200/3000VA models only)

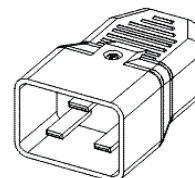

---

## INSTALLATION ENVIRONMENT

The UPS and the Battery Box must be installed in ventilated, clean environments which are sheltered from bad weather. The relative humidity in the environment must not exceed the maximum values shown in the Technical Data table. The ambient temperature, whilst the UPS is in operation, must remain between 0 and 40°C, and the UPS must not be positioned in places which are exposed to direct sunlight or to hot air.



The recommended operating temperature for the UPS and the batteries is between 20 and 25°C. The actual operating life of the batteries is 5 years on average with an operating temperature of 20°C. If the operating temperature reaches 30°C, the operating life is halved.

---

## BATTERY BOX INSTALLATION




### **ATTENTION:**

**CHECK ON THE DATA PLATE THAT THE VOLTAGE OF THE BATTERY BOX IS THE SAME AS THAT ALLOWED BY THE UPS.**

Battery boxes can be installed in series for extended runtimes. Connect the Battery Boxes in series as shown in the figure below:

If the UPS is connected to a battery box, the maximum active power is derated from PF 0.9 to PF 0.8.

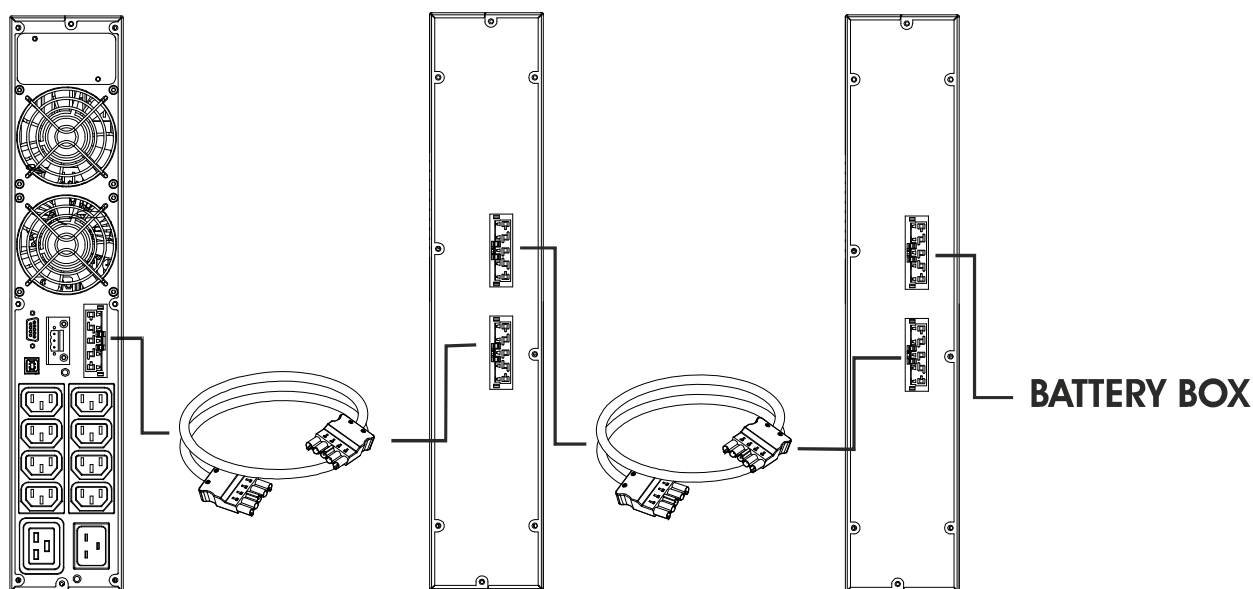

## SETTING THE NOMINAL BATTERY CAPACITY

Before installing one or more Battery Boxes, the UPS must be configured in order to update the nominal capacity value (total Ah UPS's internal batteries + external batteries) using the dedicated configuration software **UPStools** contained on the CD-ROM supplied with the UPS.

The battery box must only be installed while the UPS is switched off and disconnected from the mains power supply.

### **CAUTION:**



The connection cables cannot be extended by the user.

After connecting the UPS to its Battery Boxes, insert the fuses and turn the Battery Box battery isolators (SWBATT) to the ON position.

It is not possible to connect more than one UPS to a single battery box, or to several Battery Boxes connected in a series.



To check the availability of a new version of the latest software, visit the website **[www.riello-ups.com](http://www.riello-ups.com)**.

---

## TOWER VERSION

This chapter describes the steps for preparing the UPS and battery box for tower version use.




### ATTENTION:

For your safety and that of the product, you must carefully follow the instructions given here below.


**BEFORE YOU CARRY OUT THE FOLLOWING SEQUENCE OF OPERATIONS, MAKE SURE THAT THE UPS IS COMPLETELY SWITCHED OFF AND NOT CONNECTED TO THE MAINS POWER SUPPLY OR TO ANY LOAD**

Once removed from the packaging, the UPS is already preset for installation in the tower configuration. To complete the configuration, simply mount the UPS on the two support feet.

- Each leg consists of two parts, connecting to each other at joints. To put a leg together proceed as shown in the figure.

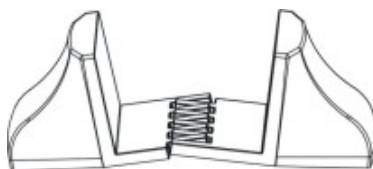

- Assemble two legs and secure the UPS on top of them as shown in the figure below.

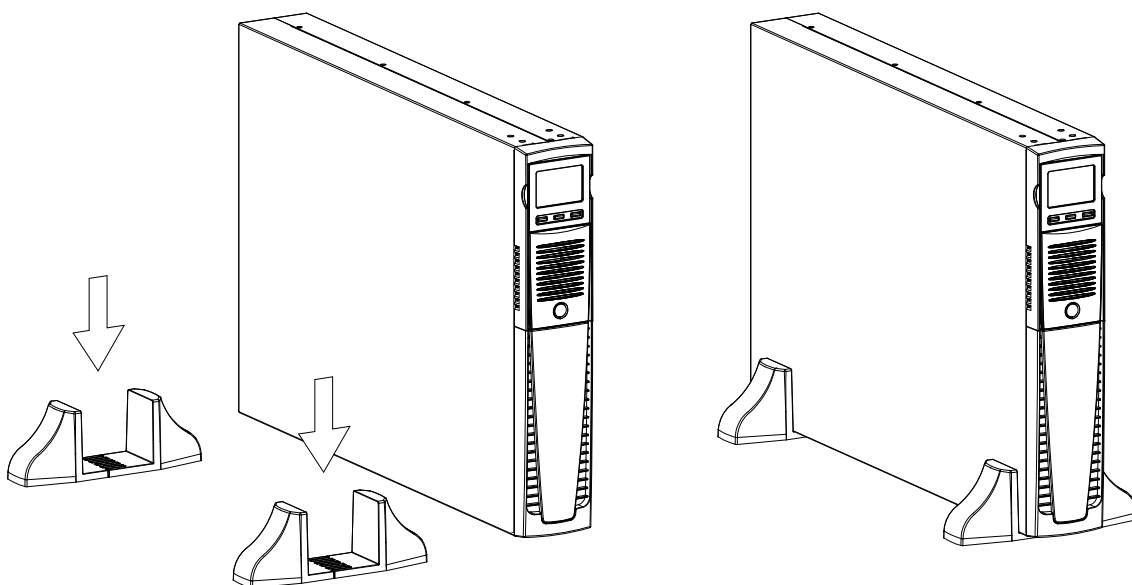

---


## TOWER VERSION WITH BATTERY BOX




**BEFORE CARRYING OUT THE FOLLOWING SEQUENCE OF OPERATIONS, ENSURE THAT:**

- **THE UPS IS COMPLETELY SWITCHED OFF AND NOT CONNECTED TO THE MAINS POWER SUPPLY OR TO ANY LOAD.**
- **THE BATTERY BOX IS DISCONNECTED FROM THE UPS, FROM ANY OTHER BATTERY BOXES AND WITH THE BATTERY ISOLATOR OPEN**

- For the battery box version each foot is composed of three parts: two supports and an extension. Assemble two feet as indicated in the figure below.

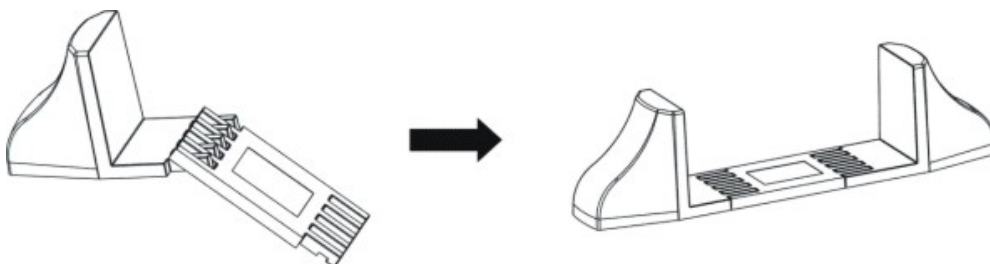

- Slide the UPS and the battery box into the two supports

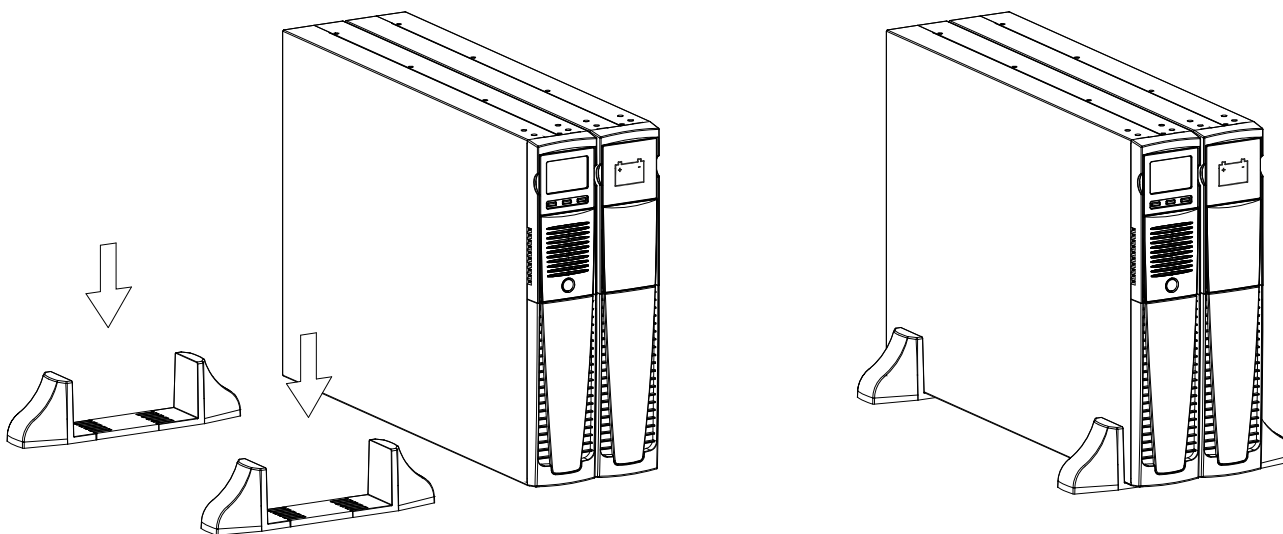

- For any additional battery boxes repeat the sequence of operations shown above.

---

## RACK VERSION


The sequence of operations to be followed in order to transform the UPS or battery box into rack version are described below.



**BEFORE CARRING OUT THE FOLLOWING SEQUENCE OF OPERATIONS, ENSURE THAT:**


- **THE UPS IS COMPLETELY SWITCHED OFF AND NOT CONNECTED TO THE MAINS POWER SUPPLY OR TO ANY LOAD.**
- **THE BATTERY BOX IS DISCONNECTED FROM THE UPS, FROM ANY OTHER BATTERY BOXES AND WITH THE BATTERY ISOLATOR OPEN**

- 1 - Pick up the panel from the sides and gently pull it away from its position just enough to be able to rotate it: **ATTENTION: The panel must be removed carefully**  
**DO NOT ATTEMPT IN ANY WAY TO REMOVE THE PANEL FROM THE UPS**

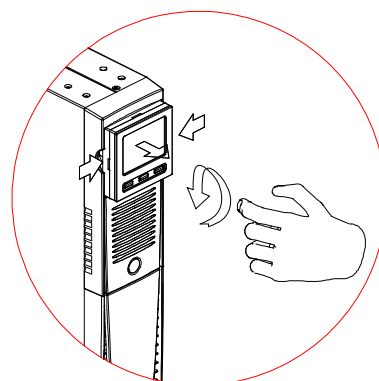


- 2 - Rotate the panel 90° counter clockwise and reinsert it carefully into the special housing.

- 3 - At this point, with the UPS or battery box in the horizontal position, secure the handles using the screws provided, as shown in the figure.

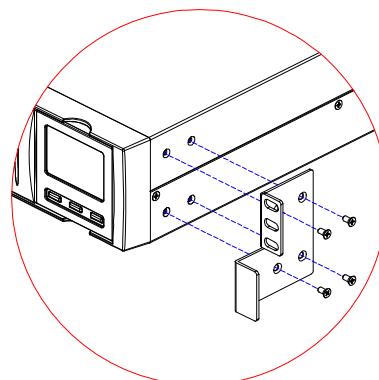


**NOTE:** Given the heavy weight, the use of support brackets is mandatory during rack installation (guide with L-shaped support). For the same reason, it is recommended that the UPS and battery box be installed in the lower part of the rack cabinet.

## CONNECTIONS AND SWITCHING ON FOR THE FIRST TIME

- 1) Check that there is a protection device against overcurrents and short circuits in the system upstream from the UPS. The recommended protection value is 10A (for the 700VA, 1000VA and 1500VA versions) and 16A (for the 2200VA, 3000VA and ER versions) with a B or C trip curve.
- 2) Power the UPS using the input cable provided.
- 3) Press the ON/OFF switch located on the front panel.
- 4) After a few moments, the UPS will switch on, the display will light up, there will be a beep and the  icon will start to flash. The UPS is in stand-by mode: meaning that it is only consuming a small amount of power. The microcontroller supervising the self-diagnoses is powered; the batteries are charging; and everything is ready for UPS activation. Battery operation is also in stand-by mode provided that the timer is active.
- 5) Connect the equipment to be powered into the sockets on the back of the UPS, using the cable supplied or a cable no longer than 10 metres.  
CAUTION: do not connect equipment which absorbs more than 10A to the IEC 10A sockets. For equipment which exceeds this level of absorption, use the IEC 16A socket only (available on the 3000VA version).
- 6) Check which operating mode is set on the display and, if necessary, see the “**Configuring operating modes**” paragraph to set the required mode. For advanced UPS configurations execute the software UPSTools which can be downloaded from the web site [www.riello-ups.com](http://www.riello-ups.com).


## SWITCHING ON FROM THE MAINS

- 1) Press the “ON” button for 1 second. After pressing it, all the icons on the display light up for 1 second and the UPS beeps.
- 2) Switch on the equipment connected to the UPS.  
**When switching on for the first time only:** after 30 seconds, check that the UPS is operating correctly:
  - 1) Simulate a blackout by disconnecting power to the UPS.
  - 2) The load must continue to be powered, the  icon on the display must light up and there must be a beep every 4 seconds.
  - 3) When power is reconnected, the UPS must go back to operating from the mains.

## SWITCHING ON FROM THE BATTERY

- 1) Press the ON/OFF switch located on the front panel.
- 2) Hold down the “ON” button for at least 5 seconds. All the icons on the display light up for 1 second.
- 3) Switch on the equipment connected to the UPS.

## SWITCHING OFF THE UPS











In order to switch off the UPS, hold down the “STBY” button for at least 2 seconds. The UPS goes back to stand-by mode and the  icon starts to flash:

- 1) If the mains power is present, the ON/OFF switch must be pressed to completely turn off the UPS.
- 2) During battery mode operation with the timer not set, the UPS automatically switches off after 30 seconds. However if, the timer is set, press and hold down the “STBY” key for at least 5 seconds to turn off the UPS. For complete shutdown, press the ON/OFF switch.

## DISPLAY PANEL MESSAGES

This chapter describes, in detail, the various information that can be displayed on the LCD.

### UPS STATUS MESSAGES

ICON	STATUS	DESCRIPTION
	Fixed	Indicates a fault
	Flashing	The UPS is in stand-by mode
	Fixed	Indicates regular operation
	Fixed	The UPS is operating from the mains
	Flashing	The UPS is operating from the mains, but the output voltage is not synchronised with the mains voltage
	Fixed	The UPS is operating from the battery. In this condition, the UPS emits an acoustic signal (beep) at regular 4-second intervals.
	Flashing	Low battery pre-alarm. Indicates that battery autonomy is coming to an end. In this condition, the UPS emits a beep at regular 1-second intervals.
	Fixed	Indicates that the loads connected to the UPS are powered by the bypass
	Dynamic	Indicates the estimated percentage charge of the batteries
	Dynamic	Indicates the percentage of charge applied to the UPS compared with the nominal value.
	Flashing	Maintenance is required. Contact the support centre.
	Fixed	Indicates that the timer is active (programmed switch-on and switch-off). The timer can be activated/deactivated using the software provided.
	Flashing	1 minute until the UPS switches back on or 3 minutes until it switches off
	Off *	The EnergyShare sockets are not configured. (Always active).
	Continuous*	Using <b>UPStools</b> software an event associated with the EnergyShare sockets was configured (e.g. end of discharge pre-alarm threshold) but the sockets are active at this time.
	Flashing *	The associated event occurred; the EnergyShare outlets have been disconnected.

\* For more information about the configuration of the EnergyShare sockets, see "Additional Features"















## MEASUREMENT DISPLAY AREA

The front panel can be used to display important UPS operating information. When the UPS is switched-on, the display shows the main voltage value.

To display a different measurement, press the “SEL” button repeatedly until the desired measurement appears.

In the event of a fault/alarm (FAULT) or a lock (LOCK), the display will automatically show the type and code of the corresponding alarm.

Some examples are shown below:

GRAPHIC EXAMPLE <sup>(1)</sup>	DESCRIPTION	GRAPHIC EXAMPLE <sup>(1)</sup>	DESCRIPTION
	Mains voltage		Battery charge percentage
	Mains frequency		Total battery voltage
	UPS output voltage		Applied load percentage
	Output voltage frequency		Current absorbed by the load
	Residual battery autonomy		Temperature of the electronics cooling system inside the UPS
	Fault / Alarm <sup>(2)</sup> : the corresponding code is displayed		Lock <sup>(2)</sup> : the corresponding code is displayed


<sup>(1)</sup> The values shown in the images in the table are purely as an indication.

<sup>(2)</sup> The FAULT / LOCK codes can only be displayed if they are active (presence of a fault/alarm or a lock).

---

## CONFIGURING THE OPERATING MODE

The area of the display shown in the figure displays the active operating mode and allows the user to choose other modes directly from the display panel.

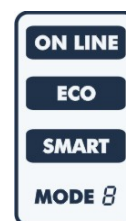

### HOW TO PROCEED:

- To access the configuration area, hold down the “SEL” button for at least 3 seconds.
- The icon corresponding to the mode currently set lights up.
- To change the mode, press the “ON” button.
- To confirm the mode chosen, hold down the “SEL” button for at least 3 seconds.

## POSSIBLE SETTINGS

The UPS is designed to be configured in various operating modes:

- **ON-LINE** is the mode with the greatest load protection and the best quality of the output waveform (\*)
- **ECO** is the mode with which the UPS consumes the least amount of power, and is therefore the most efficient (\*\*)
- **SMART ACTIVE:** in this mode, the UPS decides whether to operate in ON-LINE or ECO mode according to a statistic about the quality of the mains power.
- **STAND-BY OFF** [Mode 1]: the UPS operates as an emergency power supply. If mains power is present, the load is not powered, however should the mains supply fail, the load is powered by the UPS.

(\*) The effective value (rms) of the output frequency and voltage is constantly controlled by the microprocessor, independently from the waveform of the mains voltage, maintaining the output frequency synchronised to the mains within a configurable range.  
Outside this range, the UPS output de-synchronises from the mains supply, moving to the nominal frequency; in this condition, the UPS cannot use the bypass.

(\*\*) In order to optimise performance, in ECO mode, the load is normally powered by the bypass. If the mains goes out of the permitted tolerance range, the UPS switches to ON LINE operation. If the mains returns within the permitted tolerance range for at least five minutes, the UPS goes back to powering the load from the bypass.

## ADDITIONAL FUNCTIONS

### MANUAL BYPASS

Using the Manual Bypass feature, the UPS can be switched to bypass. In this condition the load is powered directly by the input mains, any disruption in the mains directly affects the load.



**CAUTION:**  
**BEFORE CARRYING OUT THE FOLLOWING SEQUENCE OF OPERATIONS, ENSURE THAT THE UPS'S INPUT AND OUTPUT FREQUENCY COINCIDE AND THAT THE UPS IS NOT OPERATING FROM THE BATTERY**

**Attention: even when the UPS is switched on, the load is disconnected in the event of a mains blackout.**

If the input mains deviates from the established tolerances, the UPS automatically switches to Stdby mode and disconnects the load.

To force the UPS into manual bypass mode, press and hold down the ON and SEL keys simultaneously for at least 4 seconds.

The code "C02" appears on the display.

To return to the normal operation mode press the ON and SEL keys again for at least 4 sec.

## PROGRAMMABLE AUXILIARY SOCKET (EnergyShare)

The EnergyShare sockets are outlets that allow for the automatic disconnection of the load applied to them in certain operating conditions. The events that determine automatic disconnection of the EnergyShare sockets can be selected by the user through the **UPStools** configuration software. For example, it is possible to select disconnection after a certain period of battery operation; or when the pre-alarm threshold for battery discharge has been reached, or when an overloading event occurs.

By default the EnergyShare sockets are not configured and therefore function as other outlets.

The EnergyShare function is associated with an icon on the display whose meaning is explained in the paragraph entitled "**Display panel indications**".

The presence and the number of these sockets depend on the UPS type, and they are distinguished by a different colour with respect to other sockets.

## REMOTE CONTROL TERMINAL BOARD

The remote control terminal allows for implementation of the REPO function (Remote Emergency Power Off) and to remotely switch on/off the UPS.

The UPS is provided by the manufacturer with the REPO terminals short-circuited. For installation remove the short circuit and connect to the device's normally closed contact.

In case of an emergency, if the stop device is used, the REPO control is opened and the UPS goes into stand-by mode and the load is completely disconnected.

**Attention:** before restarting the UPS, reset the stop device.


The circuitry of the remote control terminal board is self-powered with SELV circuits. Therefore, an external voltage supply is not required. When a contact is closed, a maximum current of 15mA circulates.

All connections with the remote control terminal board are made through a cable which guarantees a double insulation connection.

Logic of the connections:

- PIN 1-2 REPO


The function is activated when the contact is opened.

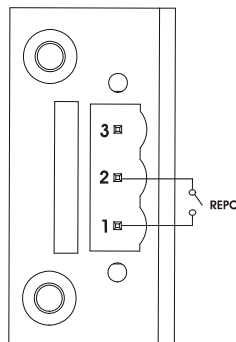

- PIN 2-3 REMOTE ON, REMOTE ON/OFF


The feature is activated by closing the contact.

Set by default as REMOTE ON, also configurable as REMOTE ON/OFF using **UPStools** software

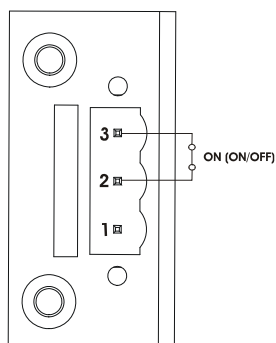

---

## SOFTWARE

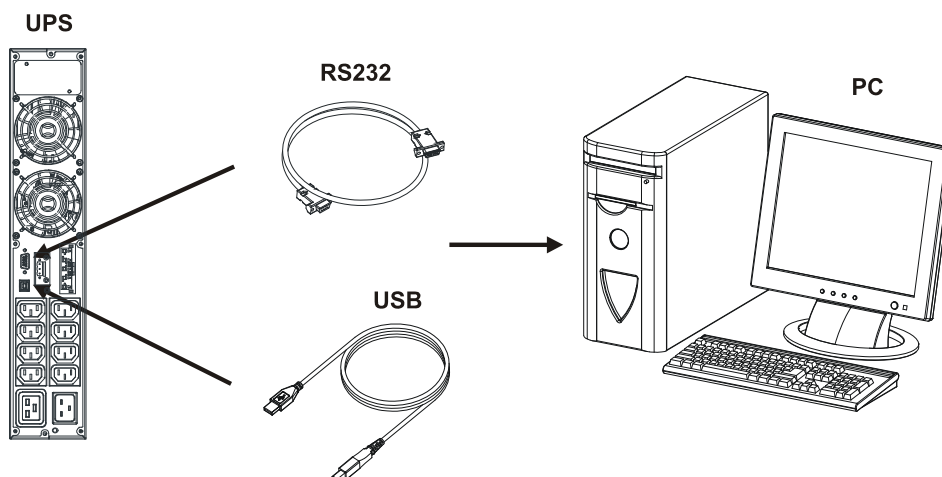

### MONITORING AND CONTROL SOFTWARE

The **PowerShield<sup>3</sup>** software guarantees effective, intuitive UPS management, displaying all the most important information such as input voltage, applied load and battery capacity. It is also able to perform shutdown operations and send e-mails, text messages and network messages automatically when certain events (selected by the user) occur.

#### INSTALLATION OPERATIONS

- 1) Connect one of the UPS's communication ports to one of the PC's communication ports using the cable supplied.
- 2) Download the software from the web site **www.riello-ups.com** selecting the specific operating system.
- 3) Follow the installation program instructions.
- 4) For more detailed information please read the user manual which can be downloaded from **www.riello-ups.com**.

### CONFIGURATION SOFTWARE

The **UPStools** software allows the configuration and full display of the status of the UPS via USB or RS232. For a list of possible configurations available to the user, refer to the UPS Configuration paragraph.

#### INSTALLATION OPERATIONS

- 1) Connect one of the UPS's communication ports to one of the PC's communication ports using the cable supplied.
- 2) Follow the installation instructions shown within the software manual which can be located in the UPStools directory or downloaded from the web site **www.riello-ups.com**.

#### CAUTION:

If the RS232 communication port is used, it is not possible to communicate with the USB port and vice versa.

It is advisable to use a cable which is shorter than 3 metres for communication with the UPS.

To obtain additional communication ports with different functions, independent from the standard USB and RS232 ports on the UPS, various accessories are available which can be inserted into the communication card slot.



To check the availability of new, more updated software versions and for more information about the accessories available, consult the website **www.riello-ups.com**.

## UPS CONFIGURATION

The table below illustrates all the possible configurations available to the user in order to best adapt the UPS for individual requirements. It is possible to perform these operations using the **UPStools** software.

FUNCTION	DESCRIPTION	DEFAULT	POSSIBLE CONFIGURATIONS
<b>Output frequency</b>	Selects the nominal output frequency	Auto	<ul style="list-style-type: none"> <li>• 50 Hz</li> <li>• 60 Hz</li> <li>• Auto: automatic learning of the input frequency</li> </ul>
<b>Output voltage</b>	Selects the nominal output voltage	230V	220 - 240 in 1V steps
<b>Operating mode</b>	Selects one of the 4 different operating modes	ON LINE	<ul style="list-style-type: none"> <li>• ON LINE</li> <li>• ECO</li> <li>• SMART ACTIVE</li> <li>• STAND-BY OFF (MODE 1)</li> </ul>
<b>Bypass operation</b>	Selects the mode of use of the bypass line	Normal	<ul style="list-style-type: none"> <li>• Normal</li> <li>• Disabled with input/output synchronisation</li> <li>• Disabled without input/output synchronisation</li> </ul>
<b>Power-off due to minimum charge</b>	Automatic UPS power-off in battery operation mode if the charge is lower than 5%	Disabled	<ul style="list-style-type: none"> <li>• Enabled</li> <li>• Disabled</li> </ul>
<b>Autonomy limit</b>	Maximum battery operation time	Disabled	<ul style="list-style-type: none"> <li>• Disabled (complete battery discharge)</li> <li>• (1 - 65000) sec. in 1 sec steps</li> </ul>
<b>Battery low warning</b>	Estimated autonomy time remaining for the battery low warning	3 min.	(1 - 255) min. in 1 min steps
<b>Battery test</b>	Interval of time for the automatic battery test	40 hours	<ul style="list-style-type: none"> <li>• Disabled</li> <li>• (1 - 1000) h in 1 hour steps</li> </ul>
<b>Maximum charge alarm threshold</b>	Selects the user overcharge limit	Disabled	<ul style="list-style-type: none"> <li>• Disabled</li> <li>• (0 - 103) % in 1% steps</li> </ul>
<b>Input frequency tolerance range</b>	Selects the permitted range for the input frequency for switching to the bypass and for the synchronisation of the output	± 5%	(±3 - ±10) % in 1% steps

\* For configurations of the  $F_{out} = 50, 60\text{Hz}$  or if the sync is disabled with the input, the UPS downgrades the output power.


FUNCTION	DESCRIPTION	DEFAULT	POSSIBLE CONFIGURATIONS
<b>EnergyShare</b>	Select the auxiliary socket operating mode	Always connected	<ul style="list-style-type: none"> <li>• Always connected</li> <li>• Disconnection after no. seconds of battery operation</li> <li>• Disconnection after no. seconds of the battery discharge pre-alarm signal</li> <li>• ... (see <b>UPStools</b> manual)</li> </ul>
<b>Bypass voltage thresholds</b>	Selects the permitted voltage range for switching to the bypass	Low: 180V High: 264V	<ul style="list-style-type: none"> <li>• Low: 180 - 200 in 1V steps</li> <li>• High: 250 - 264 in 1V steps</li> </ul>
<b>Bypass voltage threshold for ECO</b>	Selects the permitted voltage range for operation in ECO mode	Low: 200V High: 253V	<ul style="list-style-type: none"> <li>• Low: 180 - 220 in 1V steps</li> <li>• High: 240 - 264 in 1V steps</li> </ul>
<b>Intervention sensitivity for ECO</b>	Selects the intervention sensitivity during operation in ECO mode	Normal	<ul style="list-style-type: none"> <li>• Low</li> <li>• Normal</li> <li>• High</li> </ul>
<b>Power-on delay</b>	Waiting time for automatic switching back on after mains power returns	5 sec.	<ul style="list-style-type: none"> <li>• Disabled</li> <li>• (1 - 255) sec. in 1 sec steps</li> </ul>
<b>Remote Switch on/off feature</b>	Select the feature associated with the remote control terminal board.	Pin 1-2 REPO Pin 2-3 Remote ON	<ul style="list-style-type: none"> <li>• Pin 1-2 REPO</li> <li>• Pin 2-3 Remote ON, Remote ON/OFF</li> </ul>

## COMMUNICATION PORTS

On the back of the UPS (see *UPS Views*), the following communication ports are present:

- RS232 connector
- USB connector
- Expansion slot for additional communication cards

### RS232 CONNECTOR

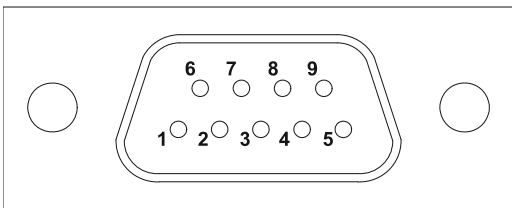
RS232 CONNECTOR		
		
PIN #	SIGNAL	NOTES
1	Programmable output *: [default: UPS in lock]	(*) Opto-isolated contact max. +30Vdc / 35mA. These contacts can be associated with other events using the software provided  For further information about interfacing with the UPS, refer to the manual provided
2	TXD	
3	RXD	
5	GND	
6	Power supply DC ( $I_{max} = 20mA$ )	
8	Programmable output *: [default: low battery pre-alarm]	
9	Programmable output *: [default: battery operation]	

### COMMUNICATION SLOT

The UPS is equipped with an expansion slot for optional communication cards (see figure on right) which allows the device to communicate using the main communication standards.

Some examples:

- Second RS232 and USB port
- Serial duplicator
- Ethernet network card with TCP/IP, HTTP and SNMP protocols
- JBUS / MODBUS protocol converter card
- PROFIBUS protocol converter card
- Card with relay isolated contacts

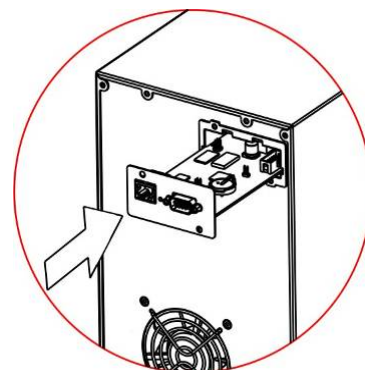

To check the availability of other accessories, visit the website [www.riello-ups.com](http://www.riello-ups.com).

---


## BATTERY PACK REPLACEMENT

The UPS is also equipped with a dedicated battery pack that allows for easy replacement of batteries (**hot swap**) in complete safety, thanks to the protected connection system.




- **WHEN THE BATTERY PACK IS DISCONNECTED, THE LOADS CONNECTED TO THE UPS ARE NOT PROTECTED IN THE EVENT OF A MAINS FAILURE**
- **THE BATTERY PACK IS VERY HEAVY. USE EXTREME CAUTION WHEN REPLACING IT.**

1. Set the UPS to bypass mode manually by pressing the ON-SEL buttons for 4 seconds (see paragraph entitled "USE / Configuration of Operating Mode). The display should show the message "C02" NOTE: in this condition the load is powered by bypass.

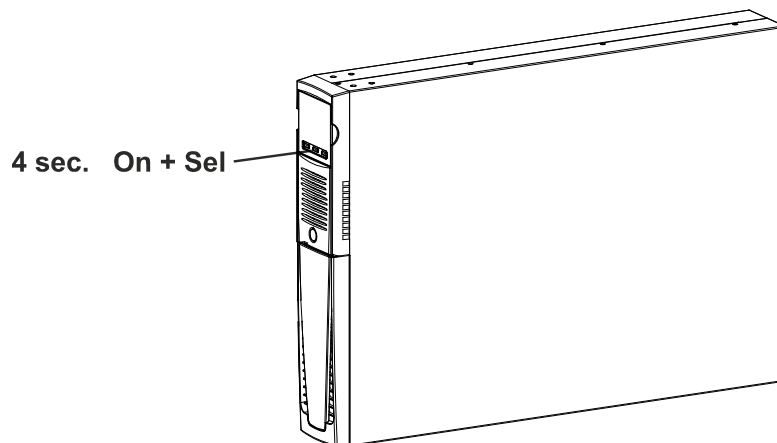


2. The battery pack is positioned behind the UPS front panel. Remove the front panel as shown in the figure below (A). Remove the screws from the battery pack's retention panel (B). Disconnect the connector that connects the battery pack to the UPS.

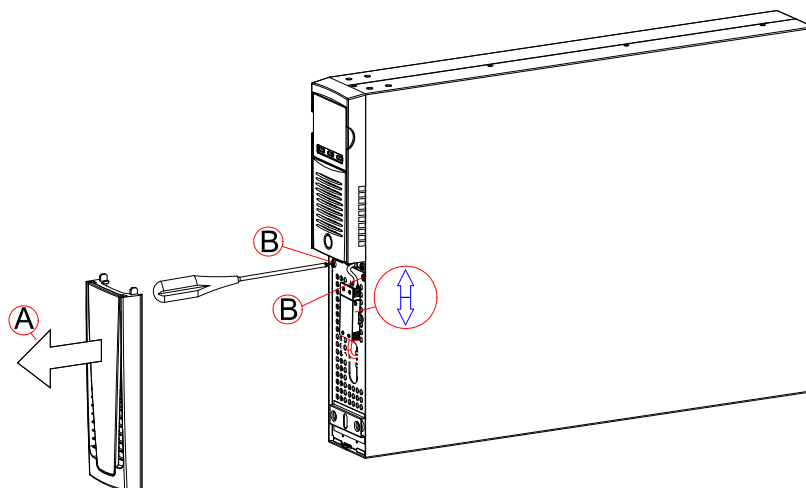




3. Remove the battery pack's retention panel carrying out the operations shown in the figure below.

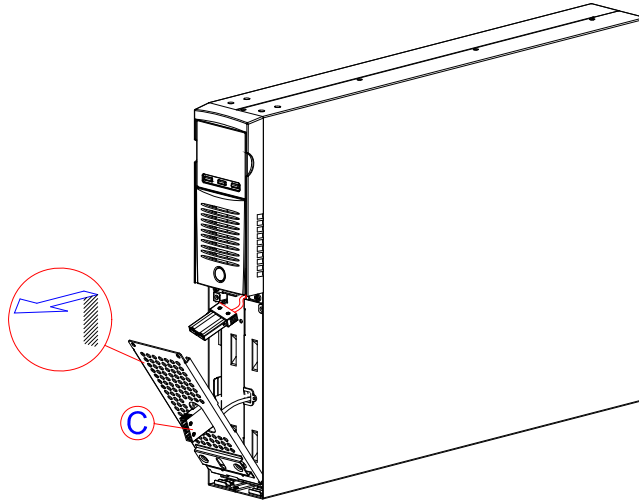

4. Slip off the battery pack pulling it towards the outside, as shown in the figure below. Be careful when extracting and lifting up the battery pack as it is heavy.. ATTENTION: the new battery pack must contain the same number and type of batteries (see the label located on the battery pack near the connector).

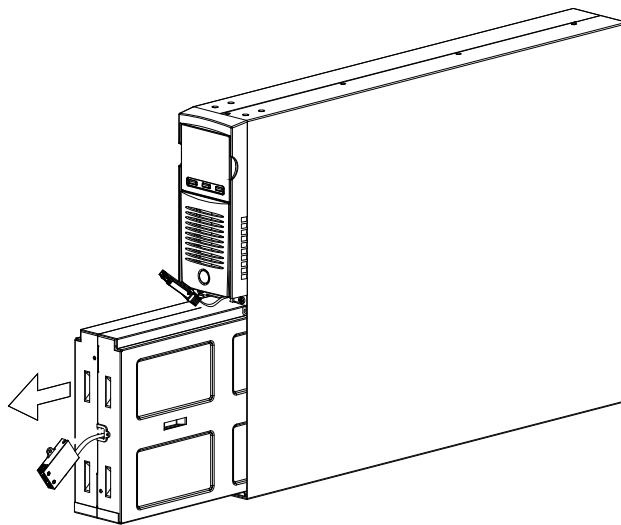

5. Insert the new battery pack into the compartment, sliding it into the UPS. Put the battery pack retention panel back in position and secure it with the two screws removed previously. Connect the battery pack cable to the UPS and close the front panel. Set the UPS to normal operation mode by pressing ON + SEL for at least 4 seconds.
6. Make sure that the display does not show the code C02.
7. Press the ON key for 5 seconds to start the battery status verification procedure.

## TROUBLESHOOTING

Irregular UPS operation is not always an indication of a fault, and can be due to minor or easy-to-resolve issues. It is therefore advisable to consult the table below as it contains information which is useful for solving the most common UPS problems.

PROBLEM	POSSIBLE CAUSE	SOLUTION
THE DISPLAY DOES NOT LIGHT UP	ON/OFF SWITCH NOT PRESSED	Press the ON/OFF switch on the front panel.
	MAIN CONNECTION CABLE MISSING	Check that the power cable is connected correctly.
	NO MAINS VOLTAGE (BLACKOUT)	Check that the power reaches the socket where the UPS is connected (try it with a table lamp, for example).
	INTERVENTION OF THE INPUT CIRCUIT BREAKER	If present, reset the circuit breaker by pressing the button on the back of the UPS. <b>CAUTION:</b> Check that there is no output overload to the UPS.
THE DISPLAY IS ON BUT THE LOAD IS NOT POWERED	THE UPS IS IN STAND-BY MODE	Press the "ON" button on the front panel to power the loads.
	THE STAND-BY OFF MODE IS SELECTED	It is necessary to change mode. The STAND-BY OFF (emergency power supply) mode, in fact, only powers the loads in the event of a blackout.
	NO CONNECTION TO THE LOAD	Check the connection to the load.
THE UPS IS OPERATING FROM THE BATTERY DESPITE THE PRESENCE OF MAINS VOLTAGE	THE INPUT VOLTAGE IS OUTSIDE THE PERMITTED TOLERANCE RANGE FOR MAINS OPERATION	Problem with the mains. Wait until the input mains voltage returns within the tolerance range. The UPS will automatically return to mains operation.
	INTERVENTION OF THE INPUT CIRCUIT BREAKER	If present, reset the circuit breaker by pressing the button on the back of the UPS. <b>CAUTION:</b> Check that there is no output overload to the UPS.
THE UPS DOES NOT COME ON AND THE DISPLAY SHOWS THE CODE: <b>A06, A08</b>	THE TEMPERATURE OF THE UPS IS LOWER THAN 0°C	Check the temperature of the environment in which the UPS is located; if it is too low, bring it past the minimum threshold (0°C).
THE DISPLAY SHOWS THE FOLLOW CODES: <b>L10, L11, F11</b>	INPUT RELAY FAULTY	Switch off and disconnect the UPS from the power supply and contact the support centre.
THE DISPLAY SHOWS THE FOLLOW CODE: <b>L02</b>	CONTROL CARD IS NOT INSERTED CORRECTLY	Switch off and disconnect the UPS from the power supply and contact the support centre.

PROBLEM	POSSIBLE CAUSE	SOLUTION
THE BUZZER SOUNDS CONTINUOUSLY AND THE DISPLAY SHOWS ONE OF THE FOLLOWING CODES: <b>A54, F50, F51, F52, F55, L50, L51, L52</b>	THE LOAD APPLIED TO THE UPS IS TOO HIGH	Reduce the load to within the threshold of 100% (or user threshold in the case of code <b>A54</b> ). If the display shows a lock, remove the load and switch the UPS off and back on again.
THE DISPLAY SHOWS THE FOLLOW CODE: <b>A61</b>	REPLACE THE BATTERIES	Contact the support centre for battery replacement.
THE DISPLAY SHOWS THE FOLLOW CODE: <b>A62</b>	BATTERIES MISSING OR BATTERY BOX MISSING OR NOT CONNECTED	On the versions with an additional battery charger in place of the batteries, check that the Battery Box is inserted and connected to the UPS correctly.
THE DISPLAY SHOWS THE FOLLOW CODE: <b>A63</b>	THE BATTERIES ARE FLAT; THE UPS IS WAITING FOR THE BATTERY VOLTAGE TO EXCEED THE SET THRESHOLD	Wait until the batteries have recharged or force power-on manually by holding down the "ON" button for at least 2 seconds.
THE BUZZER SOUNDS CONTINUOUSLY AND THE DISPLAY SHOWS ONE OF THE FOLLOWING CODES: <b>F03, F05, F07, F13, F21, F40, F41, F42, F43</b>	THE UPS IS MALFUNCTIONING; IT WILL PROBABLY LOCK SOON	If possible, disconnect the power to the load, switch the UPS off and back on again; if the problem occurs again, call the support centre.
THE BUZZER SOUNDS CONTINUOUSLY AND THE DISPLAY SHOWS ONE OF THE FOLLOWING CODES: <b>F04, L04</b>	THE TEMPERATURE OF THE DISSIPATORS INSIDE THE UPS IS TOO HIGH	Check that the temperature of the environment in which the UPS is located does not exceed 40°C.
THE BUZZER SOUNDS CONTINUOUSLY AND THE DISPLAY SHOWS ONE OF THE FOLLOWING CODES: <b>F53, L53</b>	THERE IS A FAULT ON ONE OR MORE OF THE UTILITIES POWERED BY THE UPS	Disconnect all the utilities, switch the UPS off and back on again, reconnect the utilities one at a time to identify which one is faulty.
THE BUZZER SOUNDS CONTINUOUSLY AND THE DISPLAY SHOWS ONE OF THE FOLLOWING CODES: <b>F60, L03, L05, L07, L13, L20, L21, L40, L41, L42, L43</b>	THE UPS IS MALFUNCTIONING	If possible, disconnect the power to the load, switch the UPS off and back on again; if the problem occurs again, call the support centre.
THE DISPLAY SHOWS ONE OF THE FOLLOWING CODES: <b>C01, C02, C03</b>	A REMOTE COMMAND IS ACTIVE	If unwanted, check the status of the command inputs on any optional contact card.
THE DISPLAY SHOWS <b>C02</b>	THE MANUAL BYPASS FUNCTION IS ACTIVE	To exit manual bypass mode, press the ON+SEL buttons at the same time for at least 4 seconds.


**ATTENTION:**

The UPS in case of a permanent failure will be not able to supply the load. To ensure total protection of your equipment we suggest you install an ATS device (Automatic Transfer Switch) or an external automatic by-pass.

For more information visit [www.riello-ups.com](http://www.riello-ups.com)

---

## ALARM CODES

Using a sophisticated self-diagnosis system, the UPS is able to check its own status for any anomalies and/or faults which may occur during normal operation and display them on the display panel. If there is a problem, the UPS signals the event by showing the code and the type of active alarm on the display (FAULT and/or LOCK).

### FAULT

FAULT alerts can be divided into three categories:

- **Anomalies:** these are “minor” problems which do not cause the lock of the UPS but reduce performance or prevent certain functions from being used.

CODE	DESCRIPTION
<b>A06</b>	Sensor1 temperature under 0°C
<b>A08</b>	Sensor2 temperature under 0°C
<b>A54</b>	Load percentage greater than the user threshold set
<b>A61</b>	Replace batteries
<b>A62</b>	Batteries missing or Battery Box missing or not connected
<b>A63</b>	Waiting for battery charging

- **Alarms:** these are more critical problems than anomalies because, if they persist, they could cause the UPS to lock in a very short time.

CODE	DESCRIPTION
<b>F03</b>	Incorrect auxiliary power supply
<b>F04</b>	Dissipator over temperature
<b>F05</b>	Temperature sensor1 faulty
<b>F07</b>	Temperature sensor2 faulty
<b>F11</b>	Input relay faulty
<b>F13</b>	Capacitor pre-charge failed
<b>F21</b>	Capacitor bank overvoltage
<b>F40</b>	Inverter overvoltage
<b>F41</b>	Continuous output voltage
<b>F42</b>	Incorrect inverter voltage
<b>F43</b>	Inverter under voltage
<b>F50</b>	Overload: load > 103%
<b>F51</b>	Overload: load > 110%
<b>F52</b>	Overload: load > 150%
<b>F53</b>	Short circuit
<b>F55</b>	Waiting for load reduction to return to inverter
<b>F60</b>	Battery overvoltage

- **Active commands:** Indicates the presence of an active remote command.

CODE	DESCRIPTION
<b>C01</b>	Remote control 1 (Switch Off)
<b>C02</b>	Remote control 2 (load on bypass or manual bypass command)
<b>C03</b>	Remote control 3 (Switch On/Off)
<b>C04</b>	Battery test in progress

## LOCK

LOCK alerts are normally preceded by an alarm signal and their scale leads to the powering-off of the inverter with the load being powered by the bypass line (this procedure is excluded for locks due to serious, persistent overloads and short circuits).

CODE	DESCRIPTION
<b>L02</b>	Control card is not inserted correctly
<b>L03</b>	Incorrect auxiliary power supply
<b>L04</b>	Dissipator over temperature
<b>L05</b>	Temperature sensor1 faulty
<b>L07</b>	Temperature sensor2 faulty
<b>L10</b>	Input fuse broken or input relay stuck (does not close)
<b>L11</b>	Input relay faulty
<b>L13</b>	Capacitor pre-charge failed
<b>L20</b>	Capacitor bank undervoltage
<b>L21</b>	Capacitor bank overvoltage
<b>L40</b>	Inverter overvoltage
<b>L41</b>	Continuous output voltage
<b>L42</b>	Incorrect inverter voltage
<b>L43</b>	Inverter undervoltage
<b>L50</b>	Overload: load > 103%
<b>L51</b>	Overload: load > 110%
<b>L52</b>	Overload: load > 150%
<b>L53</b>	Short circuit

## TECHNICAL DATA

UPS MODELS	SDH 1000	SDH 1500	SDH 2200 / SDH 2200 ER	SDH 3000 / SDH 3000 ER
------------	----------	----------	---------------------------	---------------------------

### INPUT

Nominal voltage	[Vac]	220 - 230 - 240		
Maximum operating voltage	[Vac]	300		
Nominal frequency	[Hz]	50 - 60		
Rated current (1)	[A]	5	7	10.5 / 11.5
				14 / 15

### BATTERY

Recharge time (standard versions)	[h]	< 4h for 80% of the load		
No. of internal batteries		3	3	6 / 0
Nominal voltage of battery box		36Vdc	Not expandable	72Vdc
Recharge current (only for ER versions)		Not applicable	Not applicable	6A
				6A

### OUTPUT

Nominal voltage (2)	[Vac]	Selectable: 220 / <b>230</b> / 240		
Frequency (3)	[Hz]	Selectable: 50, 60 or <b>self-learning</b>		
Nominal power	[kVA]	1	1.5	2.2
Nominal power	[kW]	0.9	1.35	1.98 / 1.76
				2.7 / 2.4
Overloading: 100% < load < 110%		Bypass line available: bypass activated after 2 seconds Bypass line not available: blocked after 120 seconds Bypass line not available: blocked after 60 seconds		
Overloading: 110% < load < 150%		Bypass line available: bypass activated after 2 seconds Bypass line not available: blocked after 4 seconds Bypass line not available: blocked after 4 seconds		
Load overload > 150%		Bypass line available: bypass immediately activated Bypass line not available: blocked after 1 second Bypass line not available: blocked after 0.5 second		

### OTHER DATA

Leakage current towards ground	[mA]	1		
Room temperature (4)	[°C]	0 – 40		
Humidity		< 90% without condensation		
Protection devices		excessive battery discharge - over current - short circuit - over voltage - under voltage - thermal		
Dimensions W x D x H (5)	[mm]	87 x 425 x 450		87 x 625 x 450
Weight	[Kg]	17	18	29.5 / 14.5
				31.5 / 15

For additional details regarding technical data refer to website

<sup>(1)</sup> @ rated load, rated voltage of 220 Vac, battery charging

<sup>(2)</sup> To maintain output voltage within the accuracy range specified, recalibration may be necessary after a long period of operation

<sup>(3)</sup> If the network frequency is within  $\pm 5\%$  of the selected value, the UPS is synchronized with the network. If the frequency is out of tolerance range or in battery operation, the frequency is that selected  $\pm 0.1\%$

<sup>(4)</sup> 20 - 25 °C for longer battery life

<sup>(5)</sup> The dimensions listed in the table refer to the tower version, taking into account the support feet. The rack version is suitable for being housed in 19 "cabinets with an overall size of 2U

BATTERY BOX MODELS		JSDH036-NPA-	JSDH036-NPM-	JSDH072-NPA-	JSDH072-NPM-
Battery rated voltage	[Vdc]	36Vdc		72Vdc	
Dimensions W x D x H	[mm]	87 x 425 x 450		87 x 625 x 450	
Weight	[Kg]	13.5	20.5	25	38

The "-" symbol replaces an alphanumeric code for internal use

If the UPS is connected to a battery box, the maximum active power is derated from PF 0.9 to PF 0.8.



**RPS SPA**

Viale Europa, 7

37045 LEGNAGO (VR)

Tel. +39 0442 635811 – Fax +39 0442 629098

[www.riello-ups.com](http://www.riello-ups.com) – [riello@riello-ups.com](mailto:riello@riello-ups.com)

OMNSDH1KORJENUB